



TOYOTA

ALWAYS A
BETTER WAY

Toyota C-HR

Roof rack

Installation instructions

Model year: 2016/10

Vehicle code: **X*0*-AH***W
X*0*-AH*X

Part number: PW301-10000

Manual reference number: AIM 003 822 - 0

Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps

A1

A2

PW301-10000

1x

B

PW301-10002

1x

C

PW301-10003

1x

D

90467-06207

4x

E

PZ403-00610-03

1x

F




PW301-10004

2x

G




PZ403-E2611-04

3x

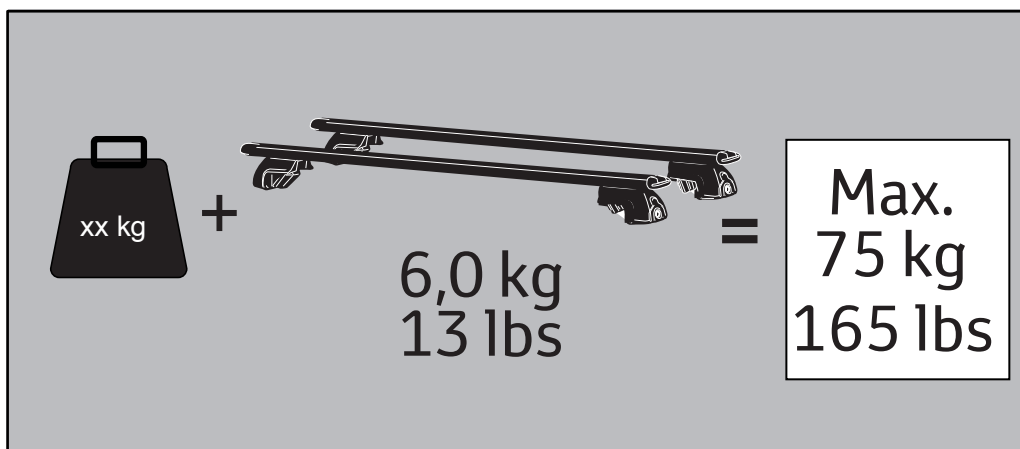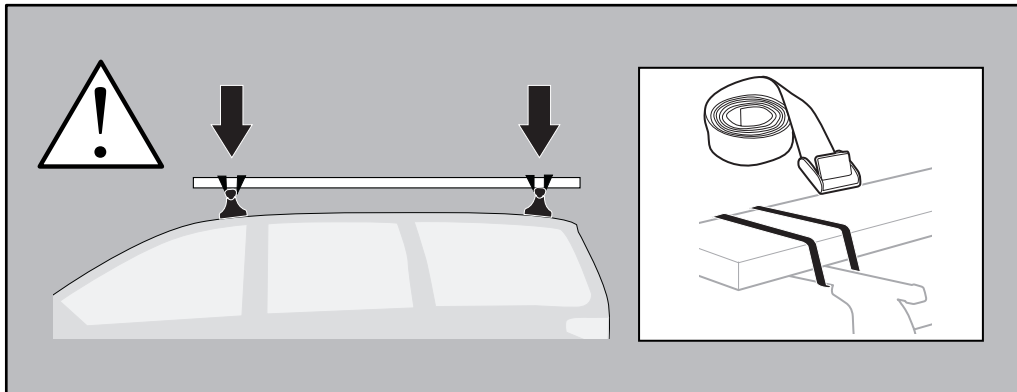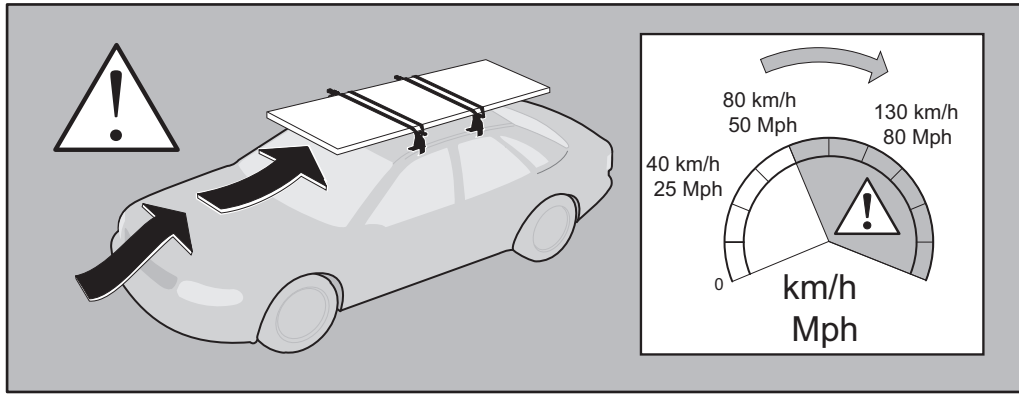


CITY CRASH
Complies with ISO norm


ISO 11154-E

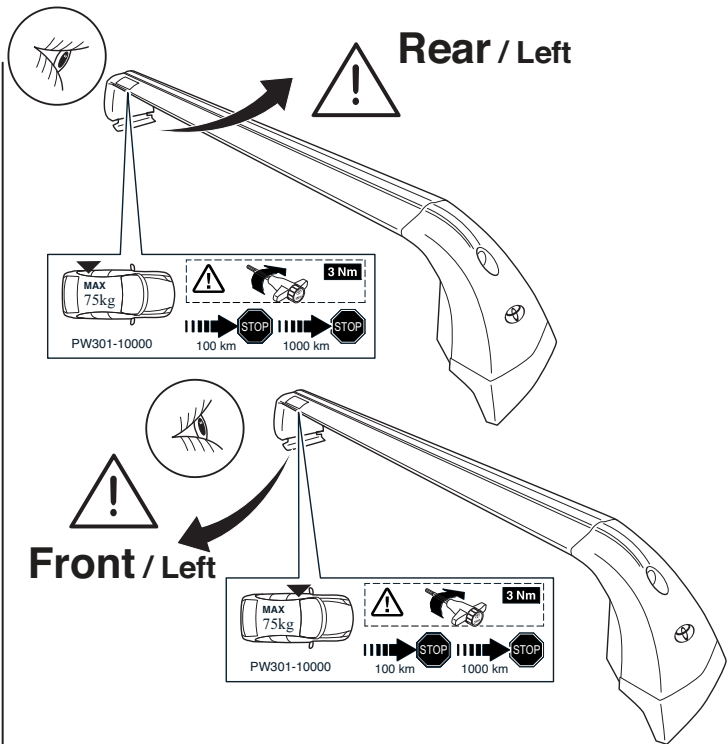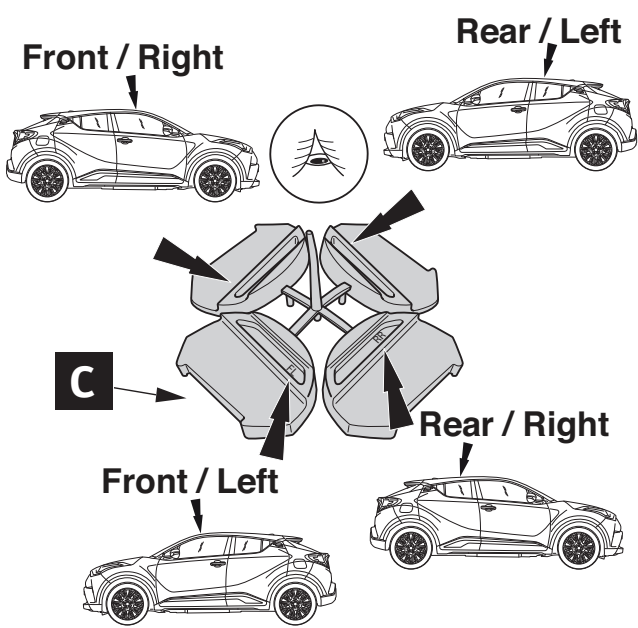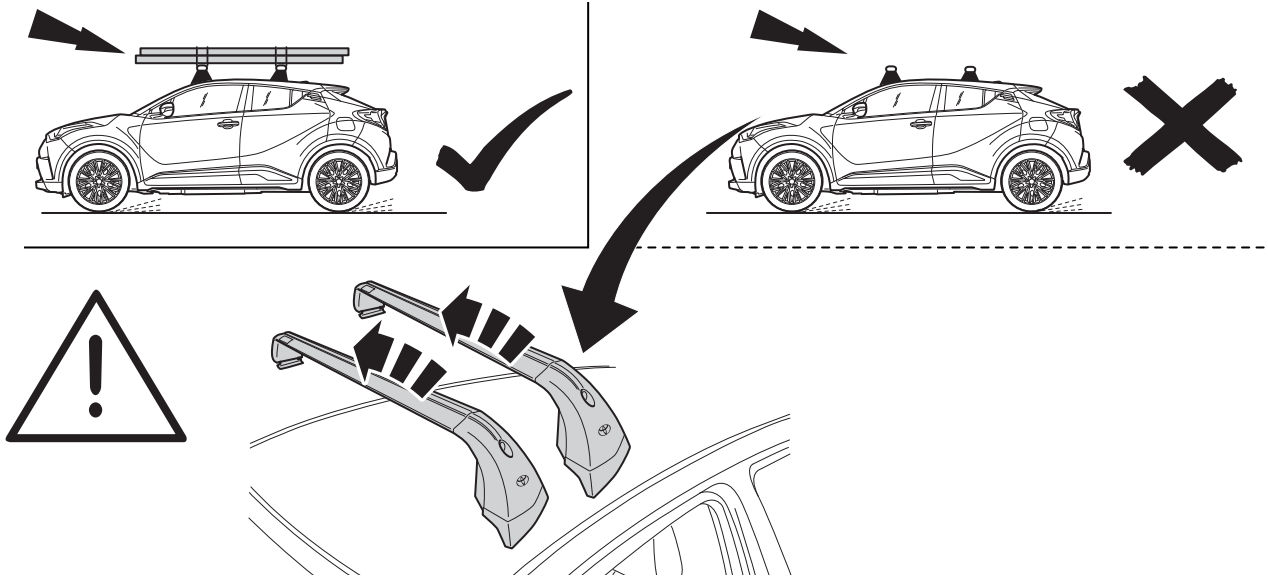





1




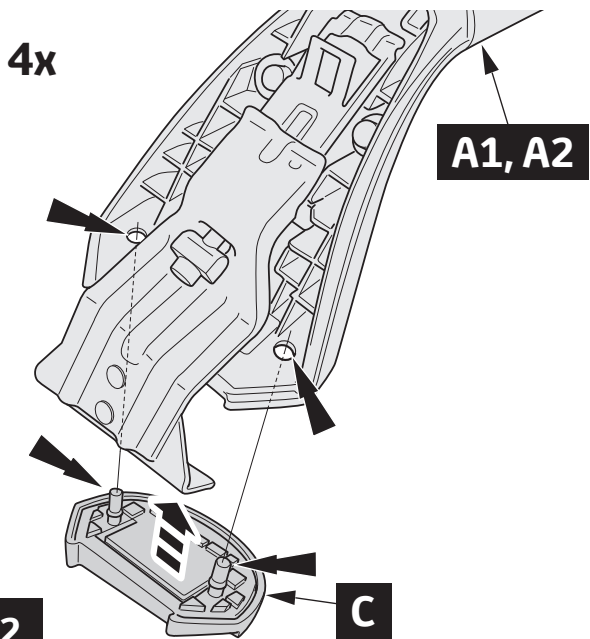


2

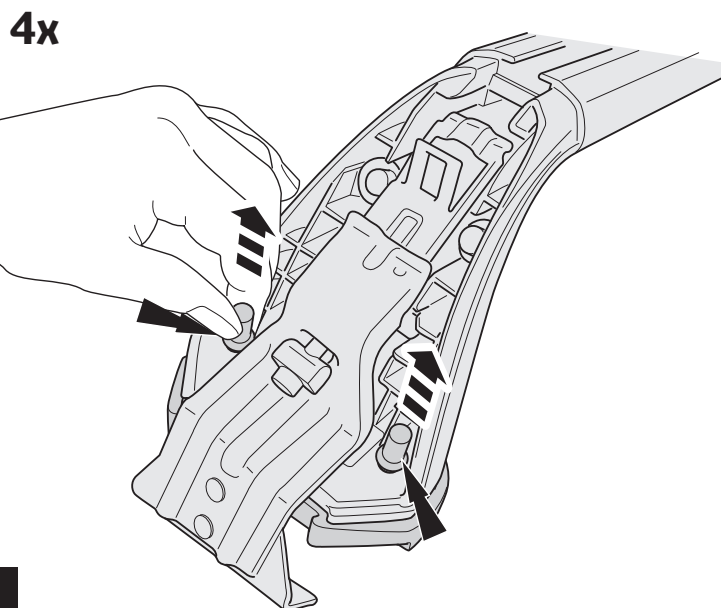


3

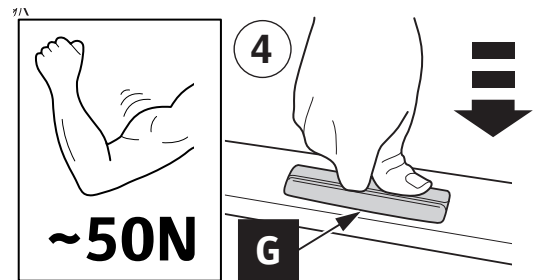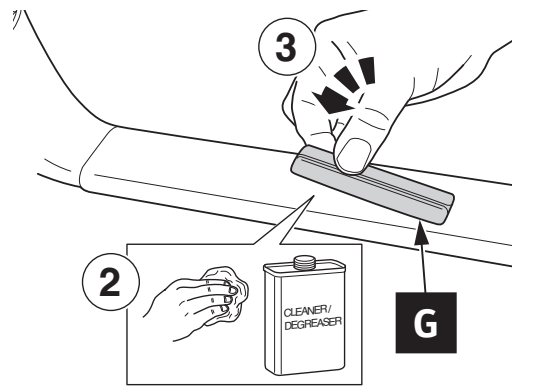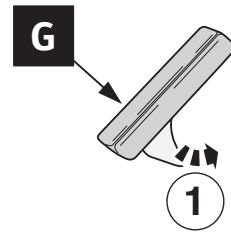
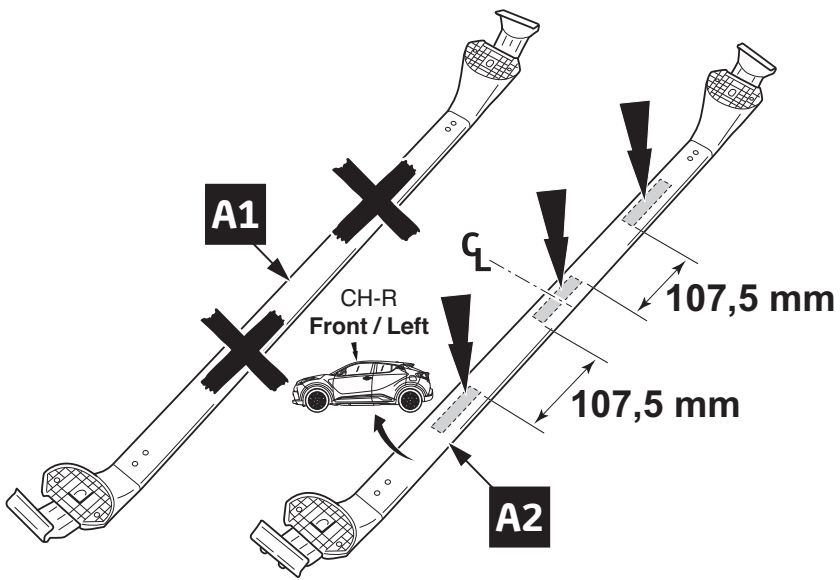


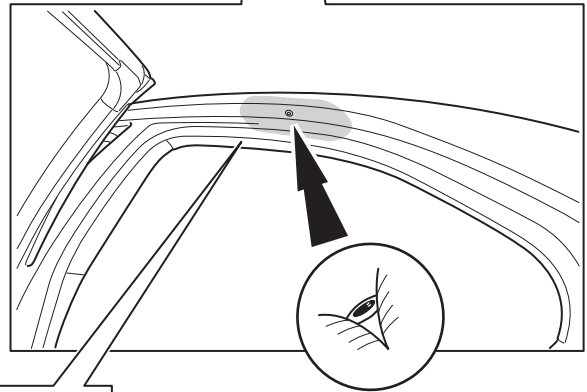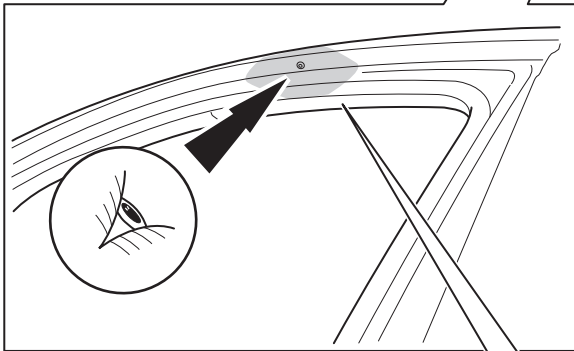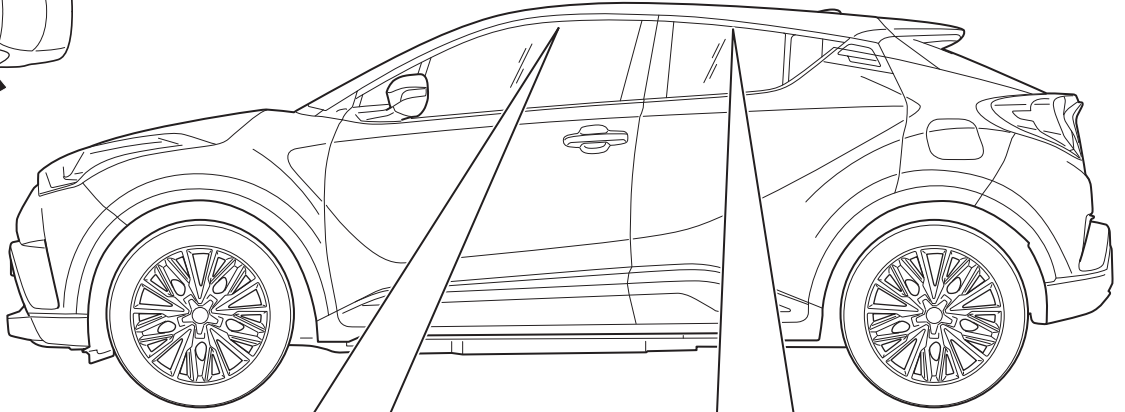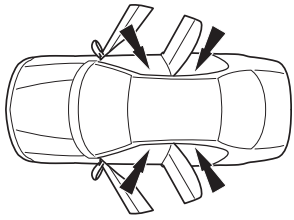


4x

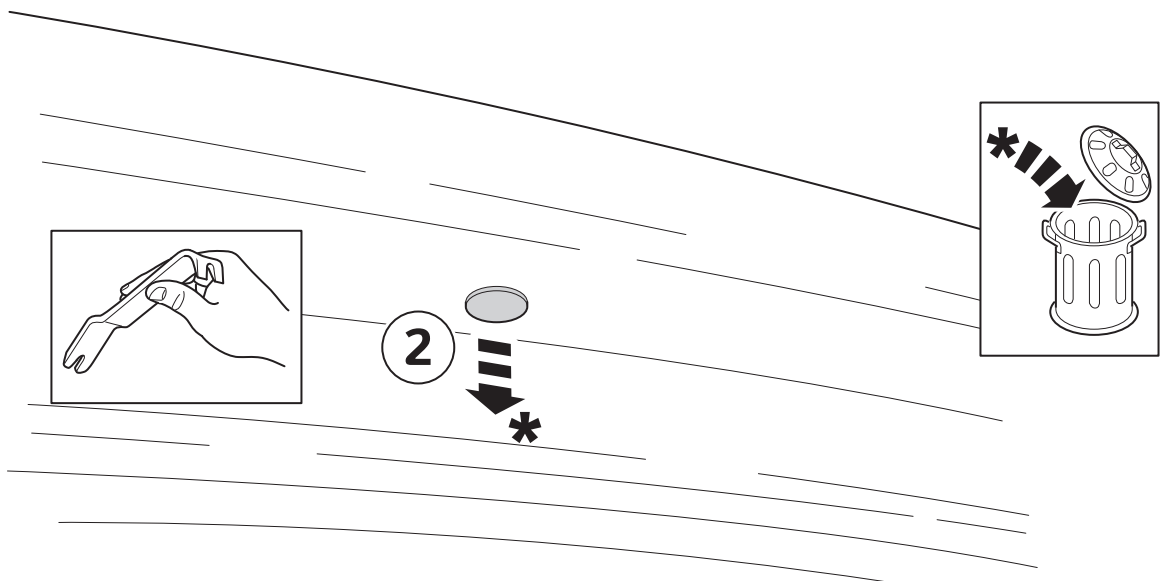




5

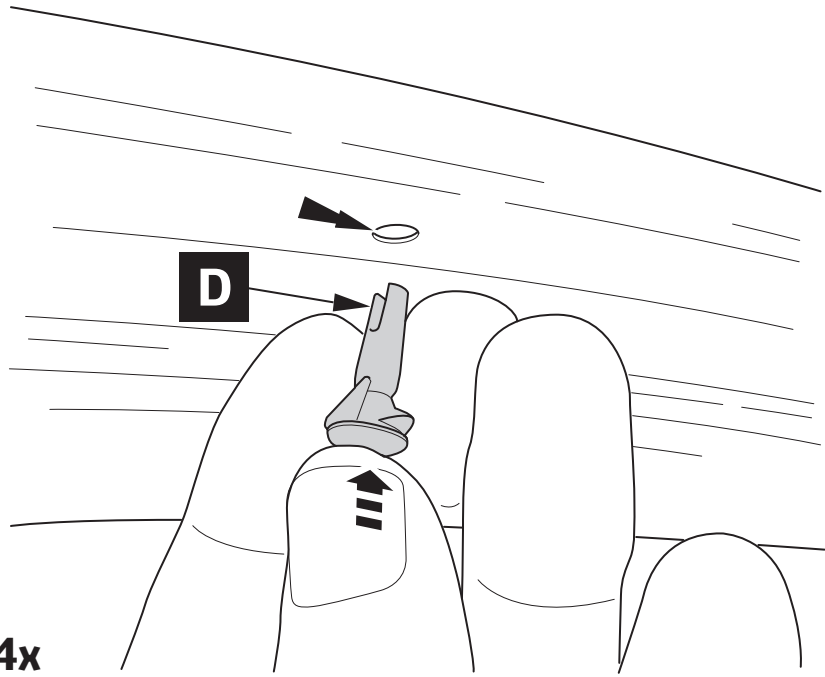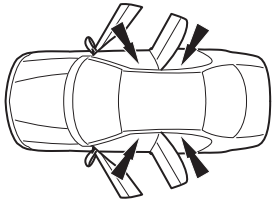


6

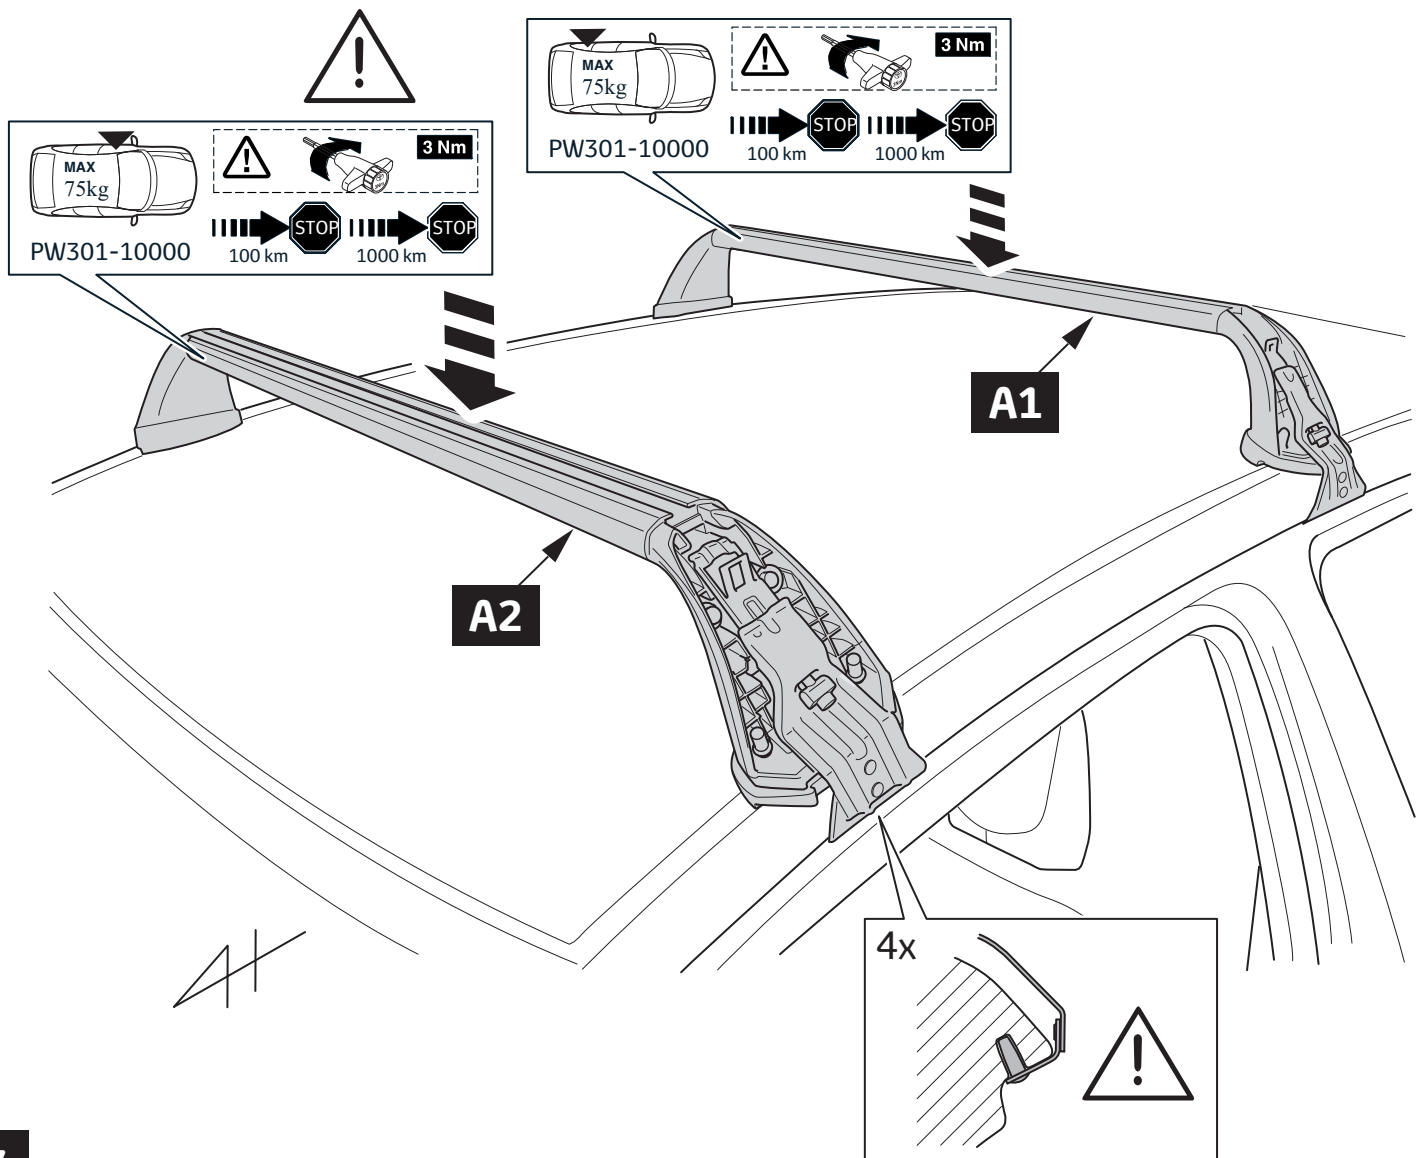


7

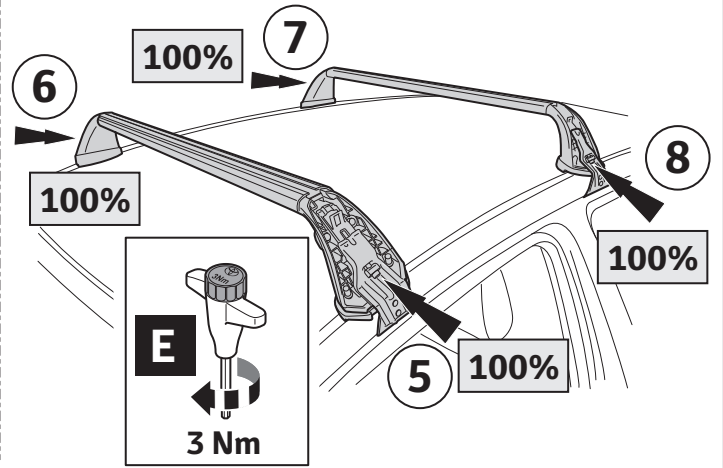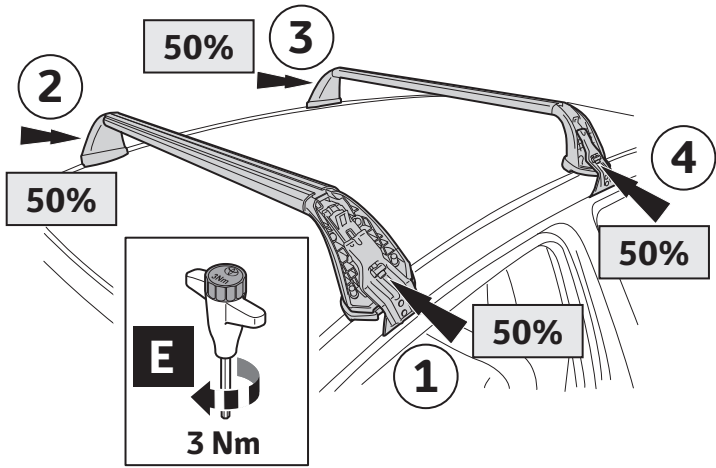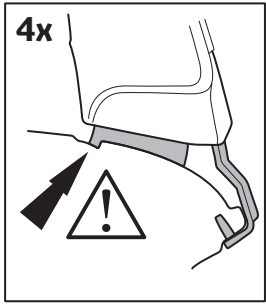



8

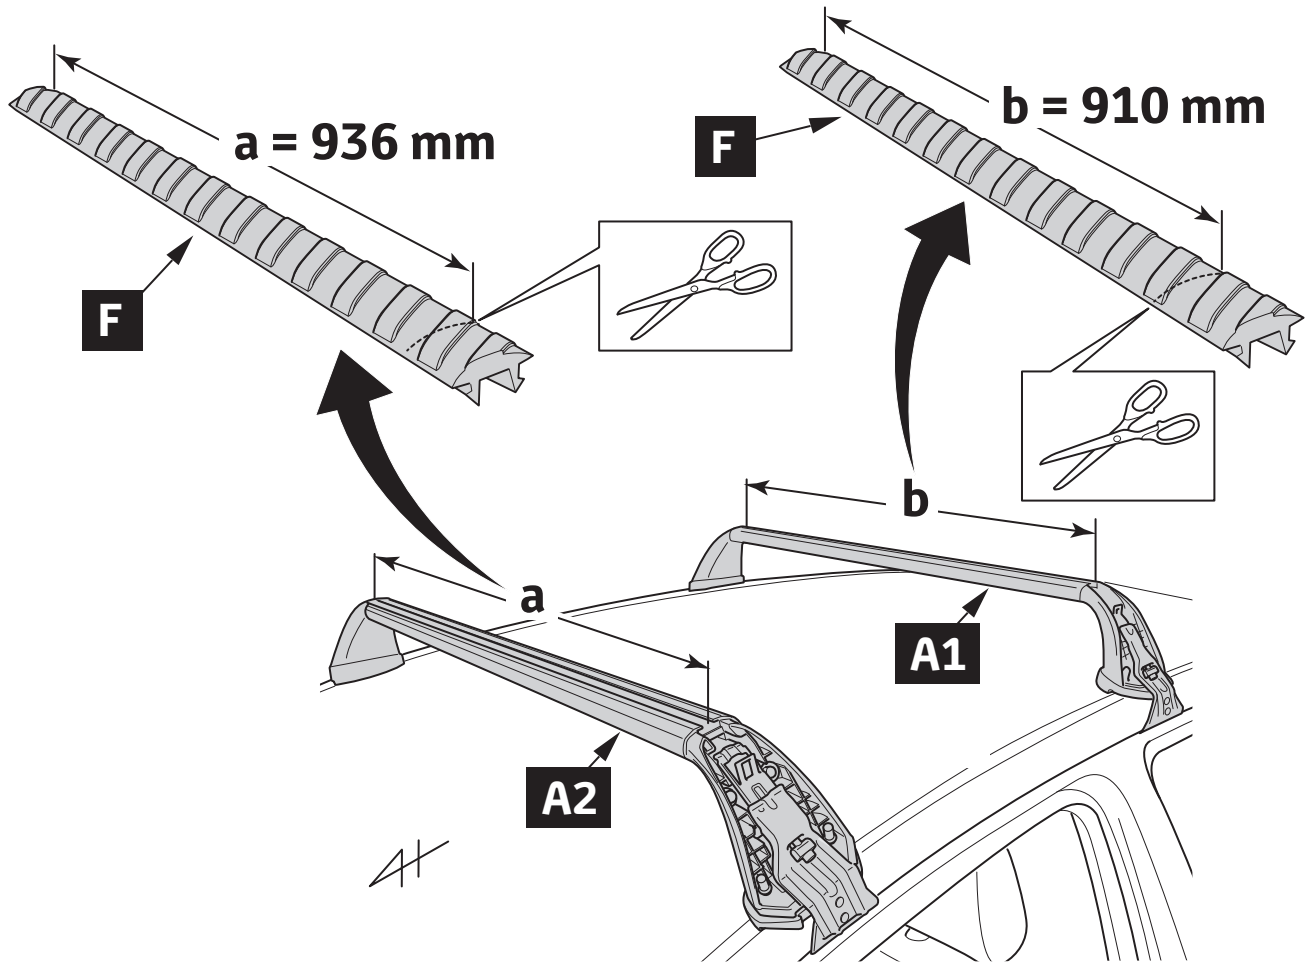


9

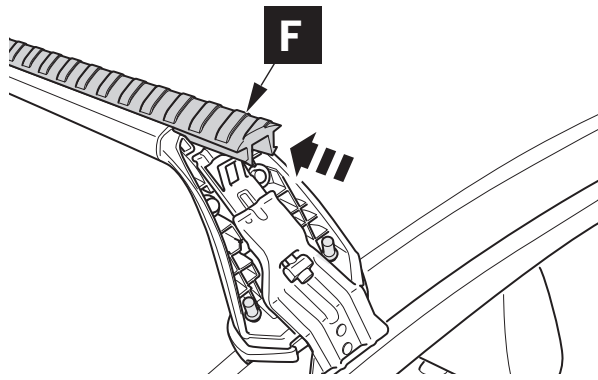



10











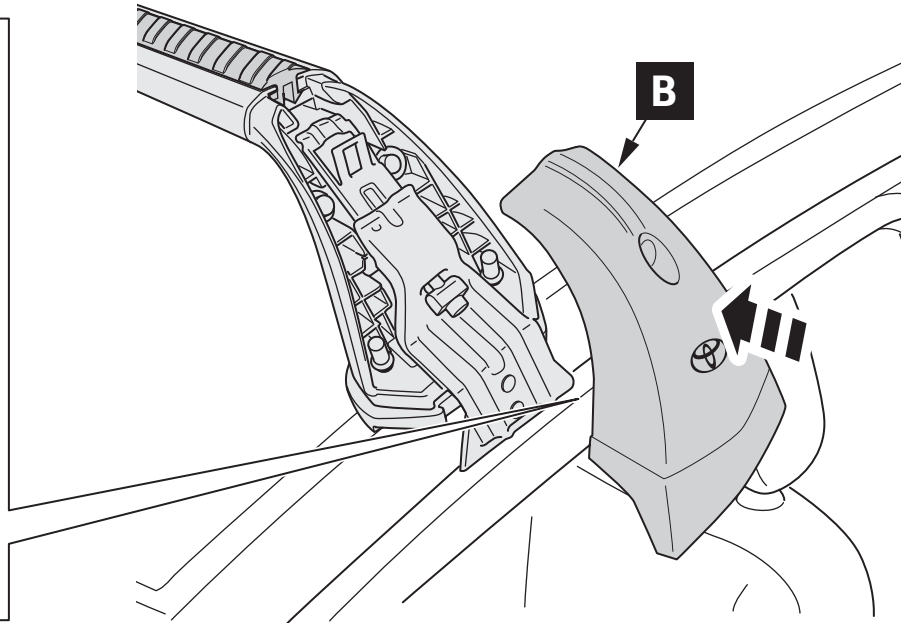
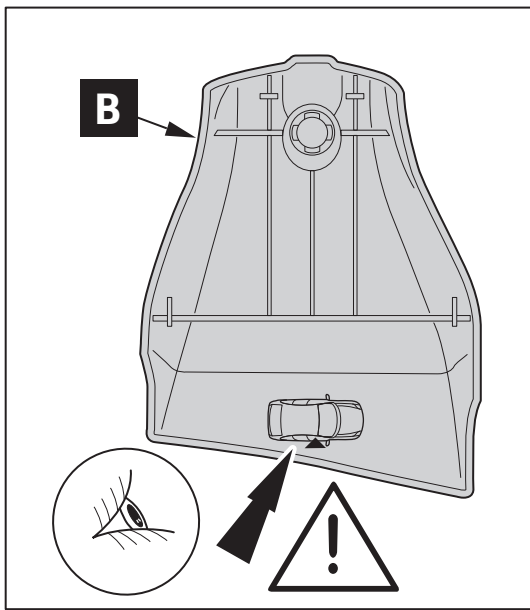


11

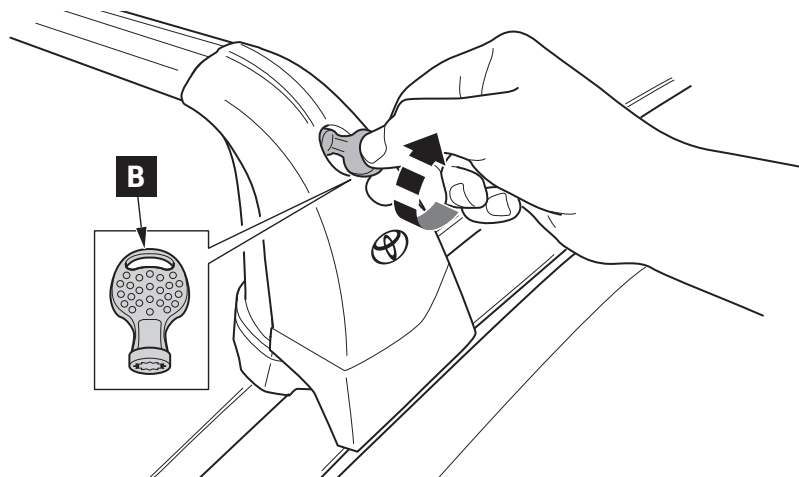

12

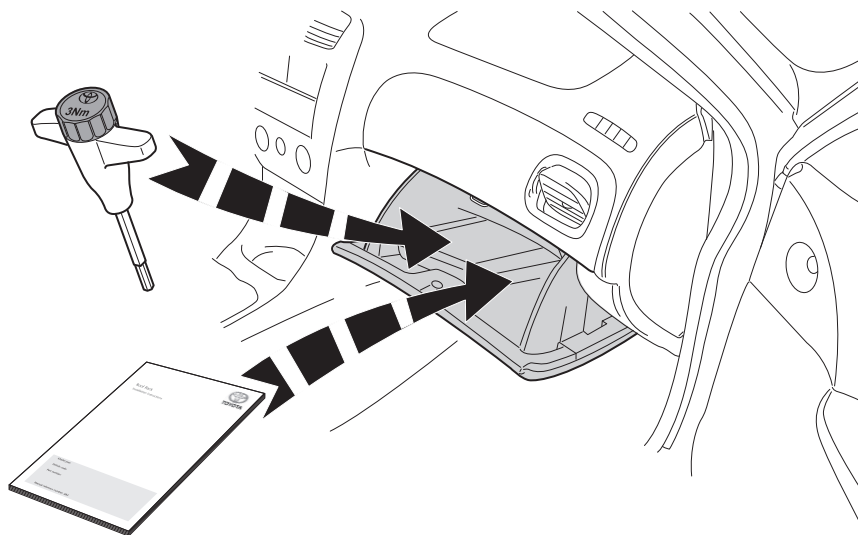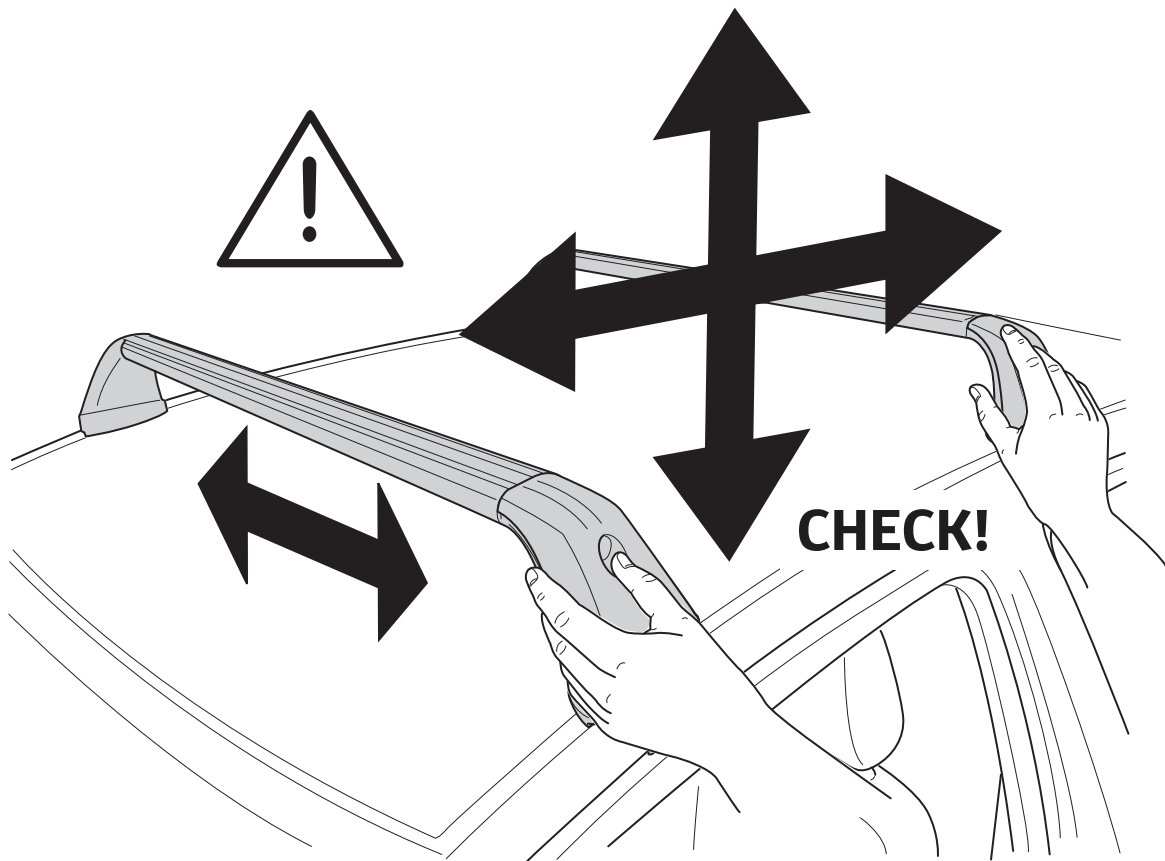

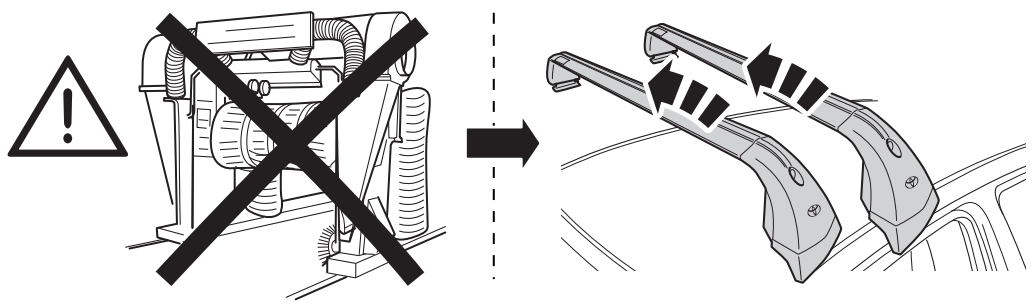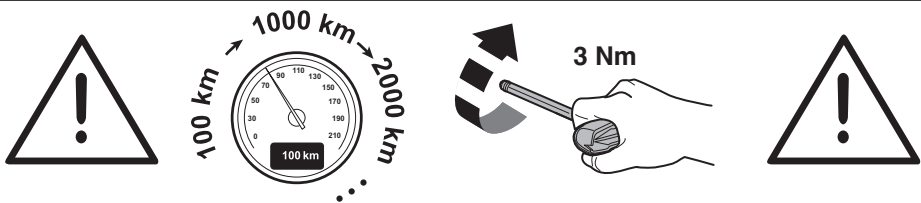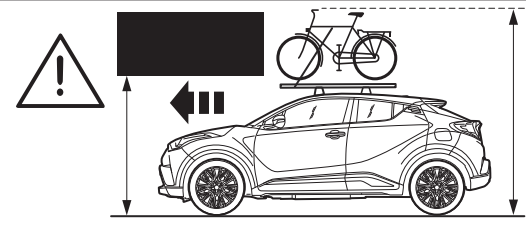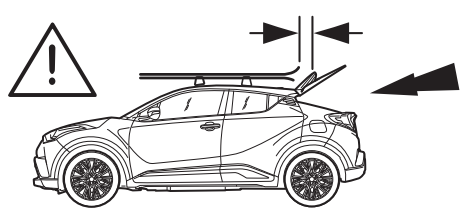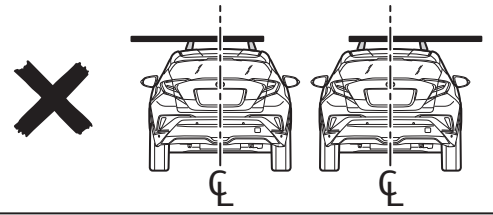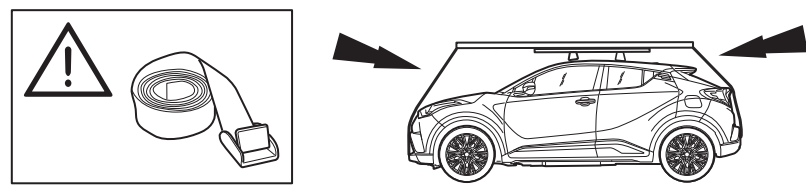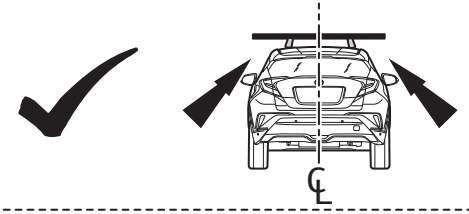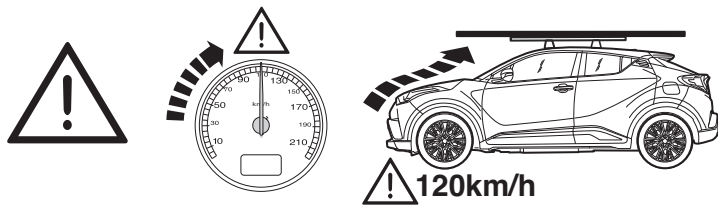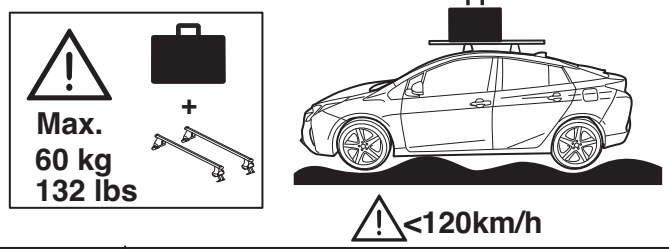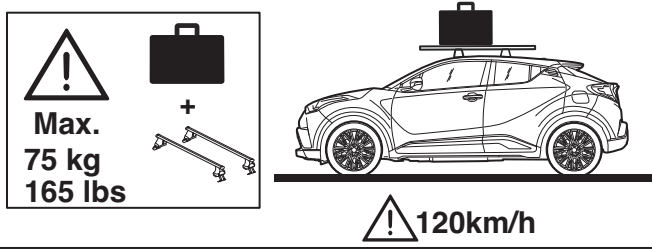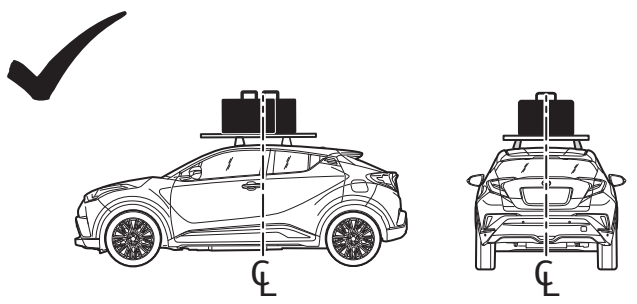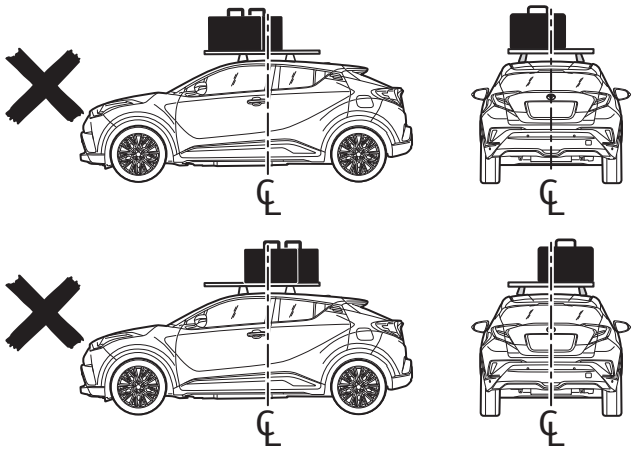

CHECK SHEET






TOYOTA

Model / Year C-HR 2016/10

Roof Rack

VIN n°

ALWAYS A
BETTER WAY

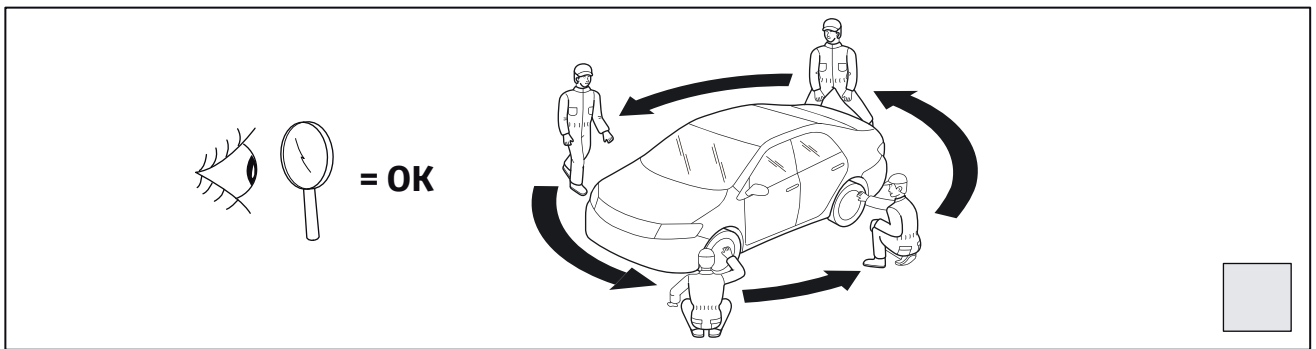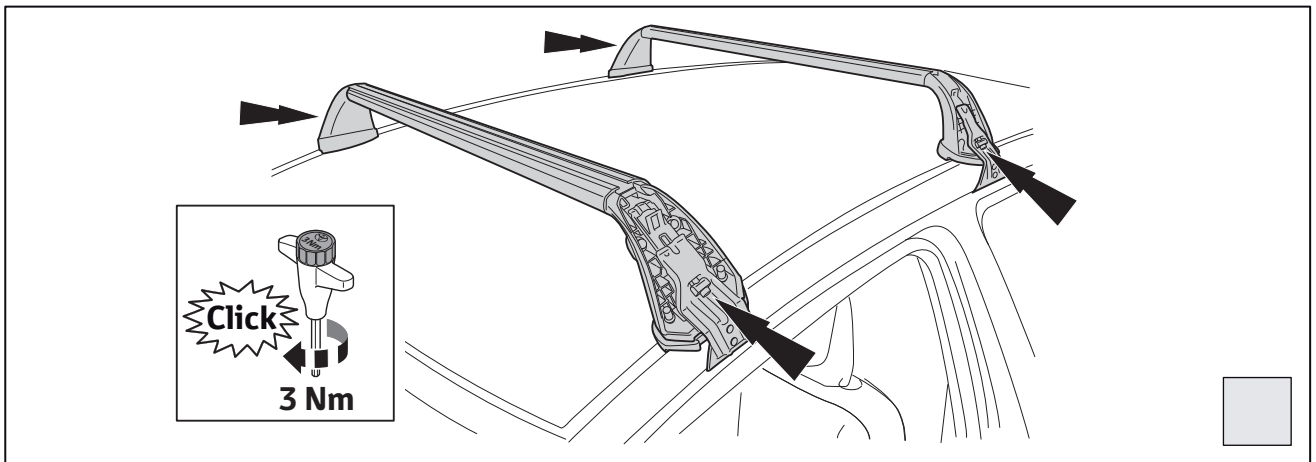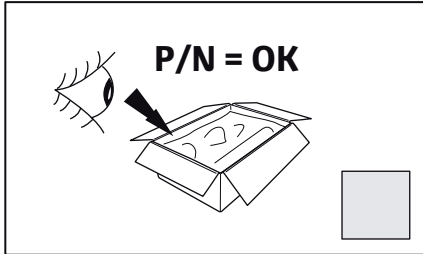

Installation Date:
... / ... /

Technician Name & Signature:

Stamp: