


8

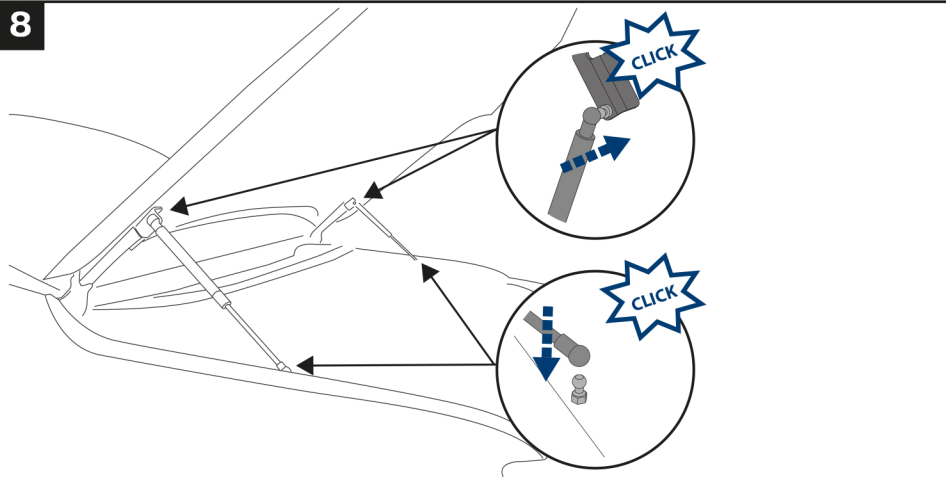

Check vehicle manual



After installation, check the correct operation of all elements.

Ford Ranger/Mazda BT-50












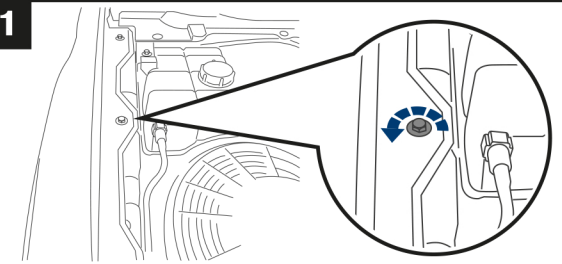





HOOD GAS STRUTS






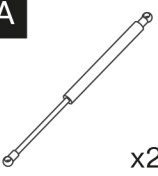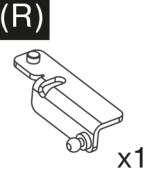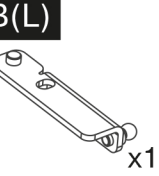




Installation Instructions

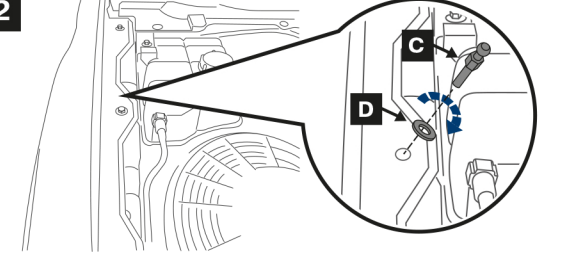

Model year:	2011-2015 / 2012-2018; 2018-
Part No.:	2A.ST.1805.1
Compatibility:	all types
Weight:	⚖️ 1 kg
Installation time:	🕒 30 min

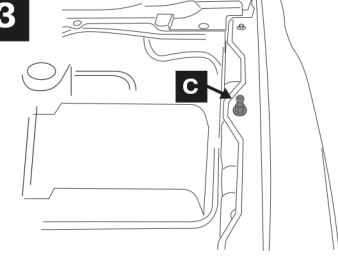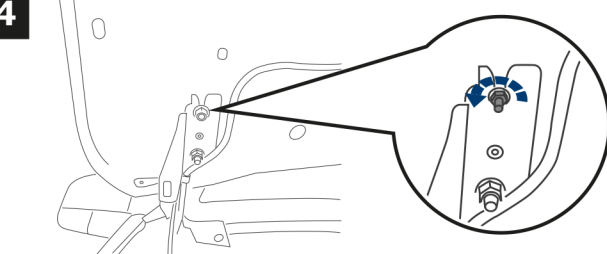

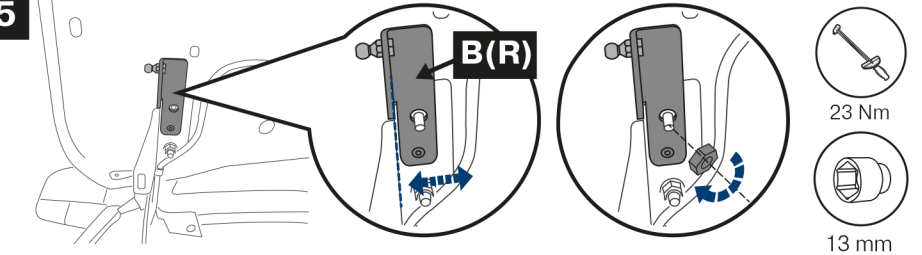A  x2	B(R)  x1	B(L)  x1	C  x2	D  Ø6 x2
 Installation Instructions				
Required Tools:				
    10 mm 13 mm				
 Attention! Before installation of gas struts, open the hood and check that there is no additional equipment installed in engine bay which can block installation.				
1			  10 mm	
2			 9 Nm  10 mm	

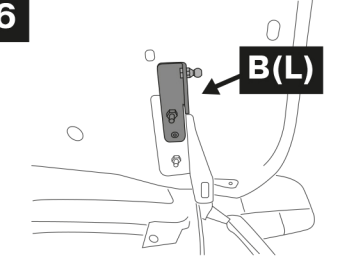3		 LHS=RHS
4		  13 mm
5		 23 Nm  13 mm
6		 LHS=RHS
7	